

Use the table below to enter the World Time Zone code (on the left of each description) from the keypad.

1: GMT+1	1000: Africa/Johannesburg
2: GMT+2	2000: Australia/ACT
3: GMT+3	2001: Australia/North
4: GMT+4	2002: Australia/NSW
5: GMT+5	2003: Australia/Queensland
6: GMT+6	2004: Australia/South
7: GMT+7	2005: Australia/Tasmania
8: GMT+8	2006: Australia/North
9: GMT+9	2007: Australia/Victoria
10: GMT+10	2008: Australia/West
11: GMT+11	3000: Europe/Amsterdam
12: GMT+12	3001: Europe/Berlin
21: GMT-1	3002: Europe/London
22: GMT-2	3003: Europe/Madrid
23: GMT-3	3004: Europe/Oslo
24: GMT-4	3005: Europe/Paris
25: GMT-5	3006: Europe/Rome
26: GMT-6	3007: Europe/Auckland
27: GMT-7	4000: Pacific/Auckland
28: GMT-8	4001: Pacific/Kiritimati
29: GMT-9	4002: Pacific/Fiji
30: GMT-10	4003: Pacific/Honolulu
31: GMT-11	4004: Pacific/Tahiti
32: GMT-12	4005: Pacific/Samoa

## World Time Zone Keypad Codes

40: GMT+0	5000: US/Alaska
	5001: US/Central
	5002: US/Eastern
	5003: US/Hawaii
	5004: US/Mountain
	5005: US/Pacific

Permalink: <http://tinyurl.com/3hyho2l>